


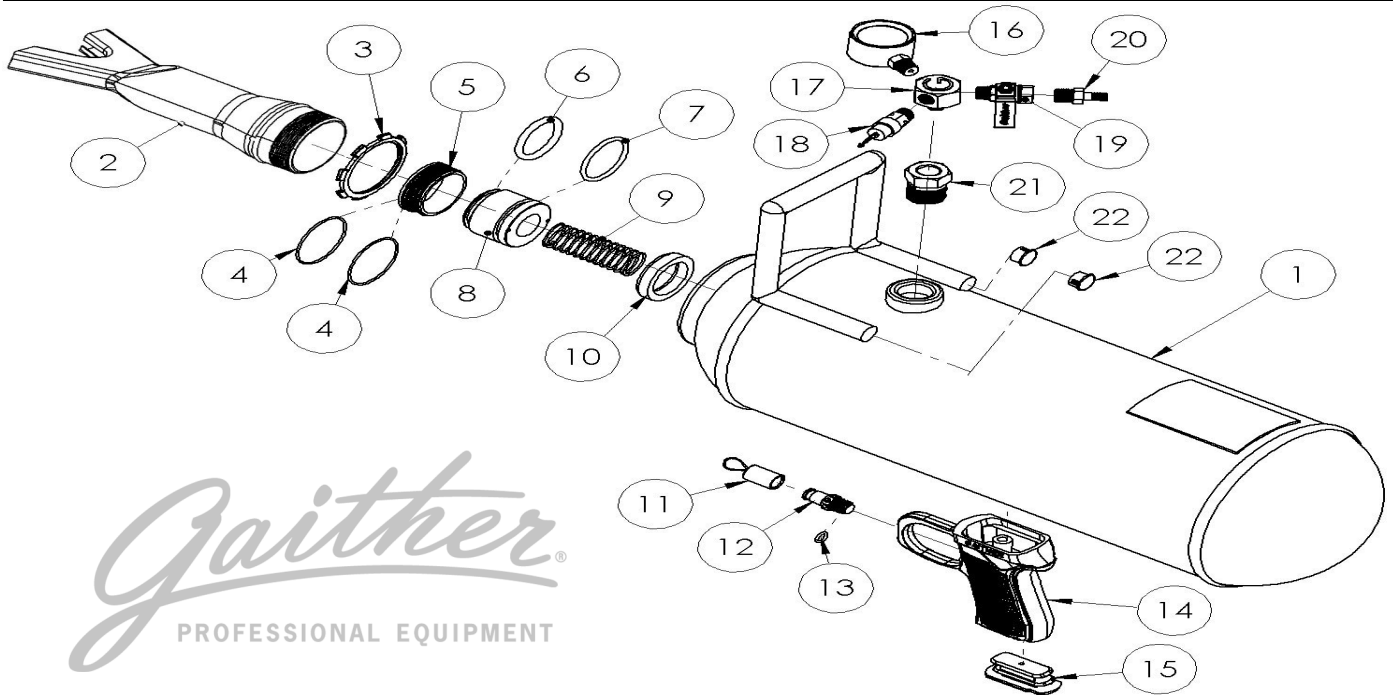

Replacement Parts list

Ref. No.	Part No.	Description
1.	12910B14L	14L. Aluminum Air Tank
2.	12913 B3	3" Slotted Barrel w/ 3" Lock Nut
3.	12912 B3	3" Lock Nut
4.	12950 B3	3" W 1.8 O-Ring
5.	12951 B3	3" Wide Screw
6.	12952 B3	3" W 5.33 O-Ring
7.	12954 B3	3" W 3.53 O-Ring
8.	12953 B3	3" Piston-L33mm w/ 2xO-Ring
9.	12955 B3	T1.8 Stainless Spring
10.	12956 B3	3" W 10.66 O-Ring
11.	12919 BS	Safety Trigger Caps
12.	12919B	Switch Valve w/ O-Ring
13.	12919 BO	W 2.0 O-Ring
14.	12920B	Grip-BB
15.	12921B	Plastic Plug
16.	12914B	1.5" Pressure Gauge -10Bar
17.	12930M	F ¼" x3 & M ¼"x1 Connector
18.	12917B3	ASME Safety Valve-8 Bar
19.	12916B	(6.35 mm) ¼"PT Intake Valve
20.	12927	Universal Connector
21.	12928 B3	¾"PT x ¼"PT Male Connector-BB14L3
22.	12921 B3	Plugs