



IMPORTANT


DURING TRANSPORTATION OR THE LIFTING OPERATION, AIR-BOUND MAY OCCUR. DO THE FOLLOWING STEPS TO BLEED AIR IF THE RAM PLUNGER IS PUMPED UP SLOWLY OR CAN NOT BE PUMPED UP.

1



OPEN THE RELEASE VALVE BY TURNING IT COUNTER CLOCKWISE FOR 2 ~ 3 TURNS.

2

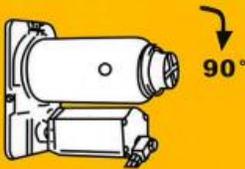


TURN THE JACK 90 DEGREE TO ITS HORIZONTAL POSITION. BE SURE THAT THE AIR MOTOR SHOULD BE UNDERNEATH THE RAM PLUNGER ASSEMBLY.

3



CONNECT THE AIR PISTOL TO THE AIR SOURCE AND PRESS THE AIR PISTOL FOR 20 SECONDS TO OPERATE THE JACK.

4

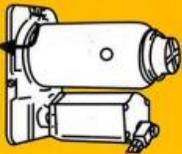

TIGHTEN THE RELEASE VALVE BY TURN IT CLOCKWISE WHILE THE JACK REMAINS AT ITS HORIZONTAL POSITION. IF THE RAM DOESN'T EXTEND, REPEAT ALL STEPS ABOVE.

AIR/HYD. JACK MAINTENANCE



MODELS: GT-20MS, GT-20MSLP, G432003, G432020, & G432021

- **DISMANTLE THE 17MM SWIVEL CONNECTOR AND LUBRICATE THE AIR MOTOR BIWEEKLY.**
- **MAKE SURE THE AIR MOTOR IS PROPERLY ALIGNED TO THE BASE AND SECURE AS SHOWN ON PAGE 2.**
- **IF UNABLE TO STRAIGHTEN THE AIR MOTOR BY HAND, LOOSEN THE 1-1/4" NUT DIRECTLY BELOW THE AIR MOTOR BY TURNING CLOCKWISE. THEN TIGHTEN THE 1-1/4" NUT BY TURNING COUNTERCLOCKWISE.**
- **ALWAYS VERIFY THAT AIR HOSE ASSEMBLY IS IN GOOD CONDITION, AND THAT THE OIL LEVEL IS TOPPED OFF.**

CHECK OUT THIS VIDEO LINK "[Bottle Jack Quick Tips](#)" OR GO TO [GAITHERTOOL.COM](#) FOR MORE INFORMATION



STANDARD HEIGHT

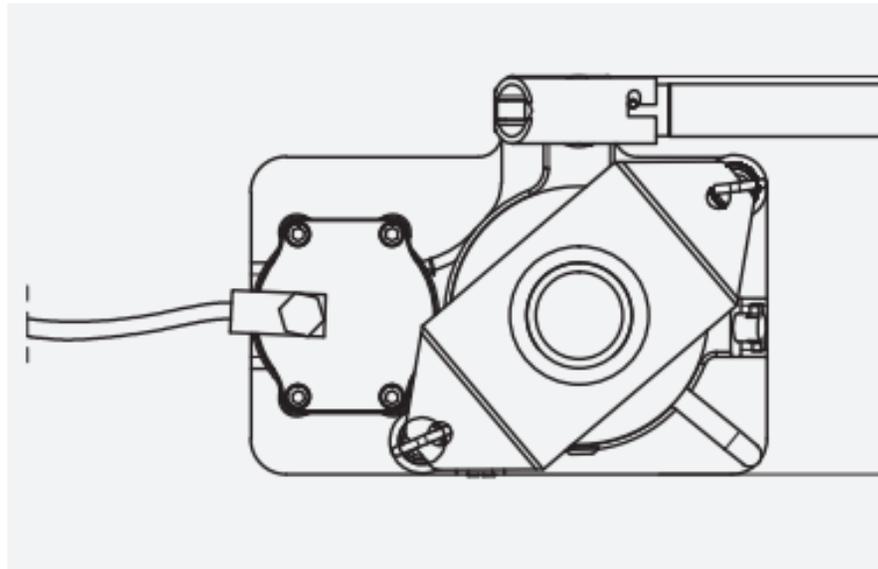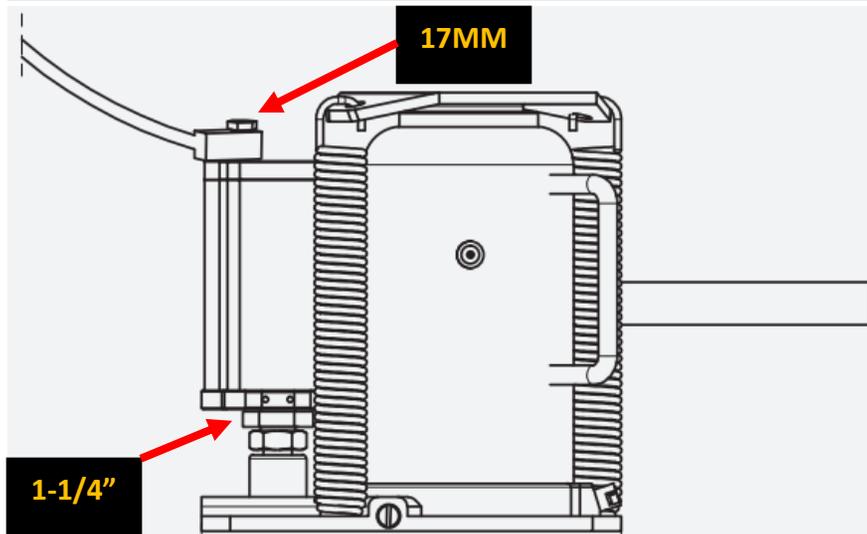

LOW-PROFILE

